




WHAT IS IT?

Designed for commissioning and programming Rako dimming and switching systems, using a computer.

Requires a Rako RAUSB or ethernet bridge, avoiding the need for fly-leads plugged into dimmers and wall plates.

Backup and restore saved project files, ensuring system configurations are never lost.

The RASOFT PC programming software enable advanced features to be accessed on a Rako system

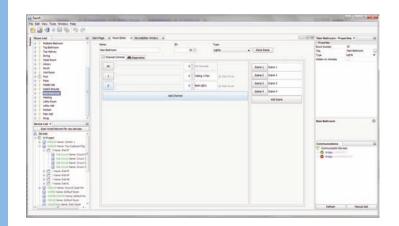

ADVANCED CONTROL

The RASOFT PC programming software allows Rako systems to be commissioned quickly and easily, with the added feature of access to advanced features. The software uses the RAUSB or an ethernet bridge to create a wireless link between the computer and Rakom receiver modules.

Advanced features include:

Channel Controls - Dimmer module commissioning & programming Profile Editor - Dimmer load curve editor

Fade Rates - Scene fade rates and raise/lower button modification Partition Setup - RAIPC intelligent partition module setup

Volt Free - RAVFR volt-free interface setup

PIR - RAPIR motion sensor setup

Infra Red - RAVIR infrared interface module setup

Relay - RACUB relay module configuration

Mapping - RAK4 dimming system configuration for RxLink receivers

Events - Astronomical timeclock programming

Mapping - Rakom signal mapping

Macros - Complex sequencing and "pathway of light" scenarios

Holiday - TCM Timeclock holiday recording viewer

Reports - Automatic report compiler for O&M manual creation

Tools - Restore factory default configurations

* Images and screen shots for illustrative purposes only.





system requirements

minimum hardware

IBM Compatible PC 1x USB 1.1 or 2.0 Port 1x 9 Pin Serial Port* 64 Megabytes of RAM

100 Megabytes of free disk storage 1024x768 screen resolution RAUSB - USB to Rakom RF interface

platform

Windows 98 Second Edition

Windows 2000 Windows XP Windows Vista

notes

We recommend updating your version of Windows with the latest security and program updates before installing the RASOFT software.


screen shot

Wired plate set-up




screen shot

Device editor

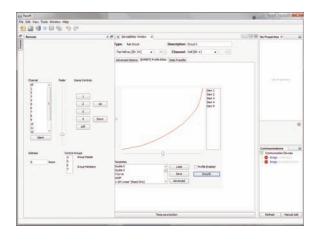

screen shot

Rak-Link mapping

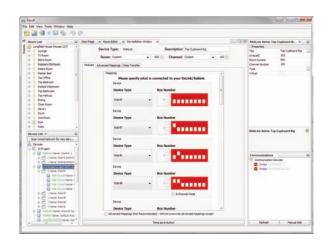

telephone +44 (0) 1634 226666 fax +44 (0) 1634 226667 www.rakocontrols.com