

## RAMPI Instruction Manual

The Rako RAMPI is a programming device for either wireless systems (replacing the obsolete RAUSB) via RF or Rako NFC (Near Field Communication) devices such as the RNC wallplates or RCI-4L and RCI-7M interfaces. The RAMPI incorporates RF receive and transmit functions as well as Bi-Directional NFC communication.

**Note:** This product requires RASOFT Pro software to operate. Download the software from [www.rakocontrols.com/rasoftpro](http://www.rakocontrols.com/rasoftpro).


### Wireless Programming

When used as a wireless programmer the RAMPI plugs into a USB port and allows programming of a Rako wireless system, either individual modules or RAK4s controlled by an RxLink. To program a system plug the RAMPI into a USB port, Rasoft Pro will recognise the device and allow programming. The RAMPI has internal blue and red LEDs below the set-up button. The blue LED flashes when the RAMPI is receiving wireless messages and the red LED flashes when transmitting Rako wireless messages. For more information on programming a wireless system using Rasoft Pro see the programming guides 'Wireless module set-up guide' or 'Wireless RAK system set-up guide' from [www.rakocontrols.com/support](http://www.rakocontrols.com/support).

### NFC Programming of RNC or RCI Modules

The following assumes that the user is already programming a system using Rasoft Pro, if this is not already the case follow the guide 'Rasoft Pro-Wireless module set-up guide' downloadable from [www.rakocontrols.com/support](http://www.rakocontrols.com/support).

Hold the RAMPI against (or near to) the NFC device as shown below.

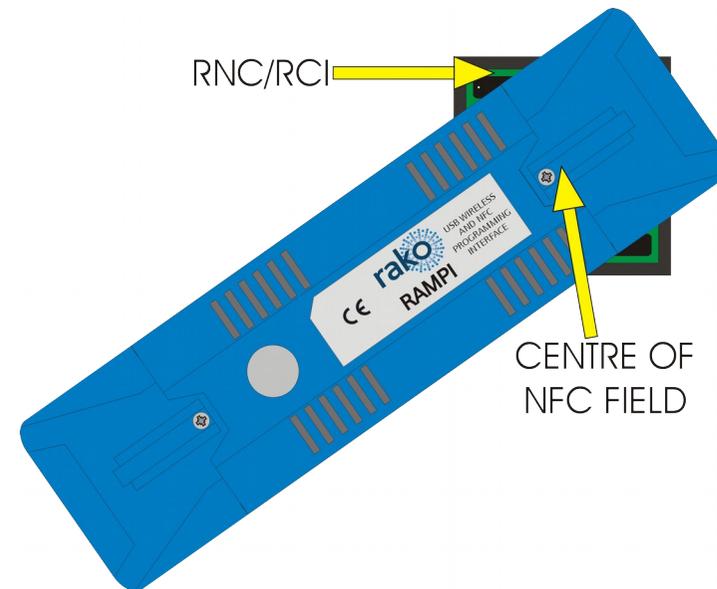

When the device is correctly positioned a green LED will flash in the RAMPI and a window will pop-up in Rasoft Pro prompting the device to be named and associated to a Room. Having done this go to the Device editor page select the inputs as necessary and assign the associated actions. This will be a single action such as selecting a scene. If a macro function is desired then select the Macro radio button and a drop down menu of actions will appear (the actual macro steps are defined under the Macro tab). Having input the required actions click on the Data Transfer tab and click Upload to device. Rasoft will issue a prompt to hold the RAMPI against (or near) the NFC device. When transferring data a progress bar will appear in Rasoft Pro and a solid green LED will appear on the RAMPI.

To confirm the NFC device has been correctly programmed press the buttons (on an RNC panel) or activate the inputs (on an RCI interface). The RAMPI has an internal wireless receiver which will detect the transmissions and display the transmissions in the bottom right hand corner of Rasoft Pro. The RAMPI has an internal blue LED below the set-up button which flashes when the RAMPI receives a Rako wireless message.

For more detailed information on programming refer to the set-up guide from [www.rakocontrols.com/Support](http://www.rakocontrols.com/Support) or Help/Set-up guides within Rasoft Pro.

#### General

Rako thanks you for having purchased a Rako product and hopes that you are pleased with your system. Should for any reason you need to contact us please contact us via our website [www.rakocontrols.com](http://www.rakocontrols.com) or by phoning our customer help line on 01634 226666.