# **Dual Relay Wiring Summary**



#### Overview

Rako can control blind/motor/screens of three main types: 240V, 24V polarity and contact closure:

240V Mains Switching	24V Polarity	Contact Closure
RACUB	RACUB	RACUB
RACUB-2L	RACUB-24VDC	WM-CUB
WM-CUB	WM-CUB	RAK4-R
RAK4-R	RAK4-R	

### Mains switching

The RACUB, RACUB-2L, WM-CUB & RAK4-R are used for "mains switching blinds". The six way terminal block is fed with permanent mains and has two switched outputs. A three core and earth cable should be run from the RACUB, RACUB-2L,WM-CUB or RAK4-R to the blind.

#### **Contact Closure**


The RACUB, WM-CUB & RAK4-R can also be used to provide a low voltage/volt free control signal to the blinds. In this case, usually, a 3 core cable is run from the RACUB, WM-CUB & RAK4-R to the blind control box.


### 24V Polarity switching

The RACUB, RACUB-24VDC, WM-CUB & RAK4-R can also be used to control 24V polarity switching blinds. A separate 24V power supply is required and a two core cable should be run from the RACUB, RACUB-24VDC, WM-CUB or RAK4-R to the blind.


## Mains (240V) switching:

Terminal	240V Mains Switching
1	Permanent Mains
2	Relay A Output (Open)
3	Linked to 4
4	Linked to 3
5	Relay B Output (Close)
6	Not used

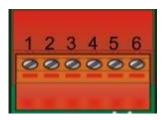


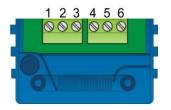

#### WM-CUB:

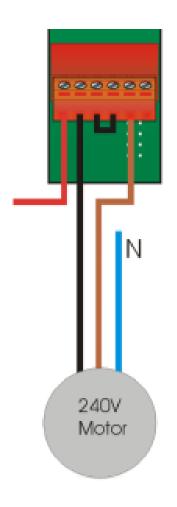


#### **RACUB/RACUB-2L:**

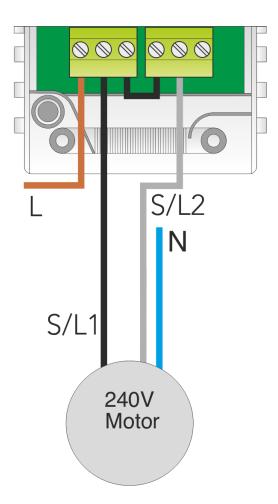

**NB**The RACUB-2L only works with mains switching blinds.


## **Contact closure:**

Terminal	Contact closure	
1	Common	
2	Relay A Output (Open)	
3	Not Used	
4	Common	
5	Relay B Output (Close)	
6	Not Used	

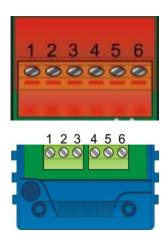


WM-CUB:


**RACUB:** 

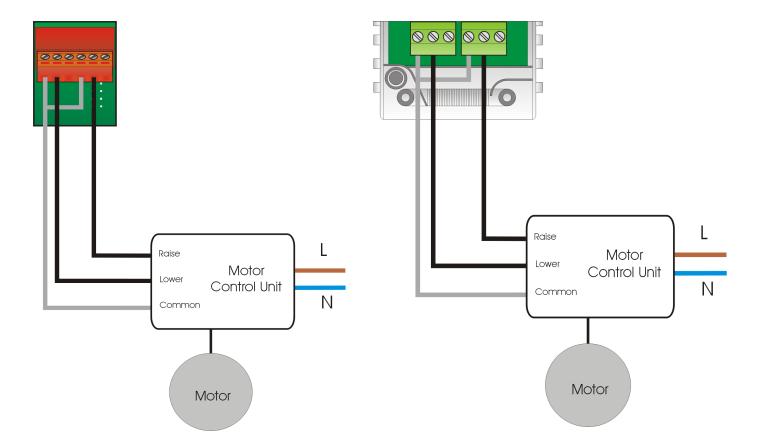


## 24V Polarity Switching:

Terminal	24V Polarity
1	Relay A Output (Open)
2	+24V from PSU
3	0V from PSU
4	Relay B Output (Close)
5	+24V from PSU
6	0V from PSU

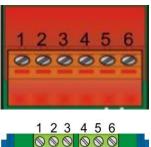


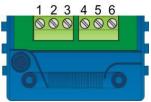

#### WM-CUB:

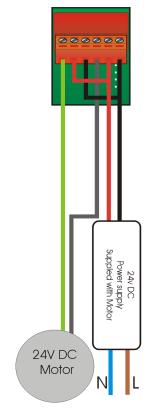

#### **RACUB:**

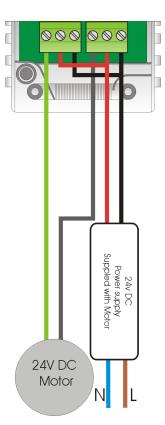

**NB**: The RACUB-24VDC only works with 24V blinds

Rako thanks you for having purchased a Rako product and hopes that you are pleased with your system. Should for any reason you need to contact us please contact us via our website <a href="www.rakocontrols.com">www.rakocontrols.com</a> or by phoning our customer help line on 01634 226666.

