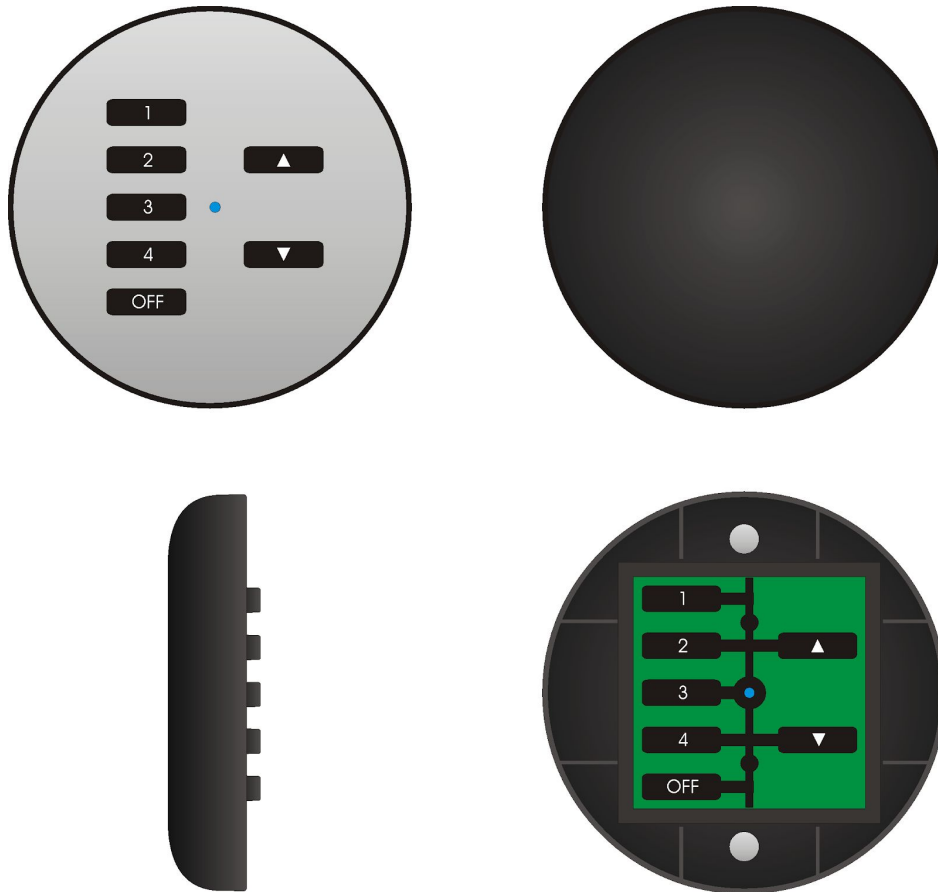# RLC-xxx Instruction Manual

Overview

The RLC-xxx are cover plate kits for two, three, six, seven and ten button wireless keypads. Combining the RLC-xxx with an appropriate keypad creates a hand-held control panel.

RLC-070 - Seven button

For use with: RCM070, RNC070, RCM071, RCM072, RCM-Audio

RLC-100 - Ten button

For use with: RCM-100, RNC100, RCM-101, RCM-102, RCM103

RLC-020 - Two button

For use with: RCM020, RNC020

RLC-030 - Three buttons

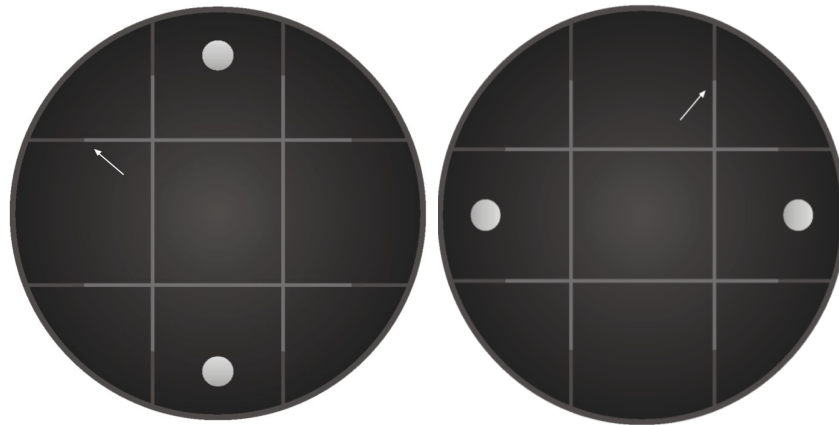For use with: RCM030

RLC-060 - Six buttons

For use with: RCM060

Installation

When inserting the keypad in to the RLC-xxx it is important that it is oriented correctly. The diagonal arrow should always be pointed towards the top of the keypad.

With the RLC060 and RLC100 the magnets will be horizontally aligned. With the RLC020, RLC030 and RLC070 the magnets will be vertically aligned.

Small slots are provided in the webs around the inner perimeter of the case to locate the aerial.
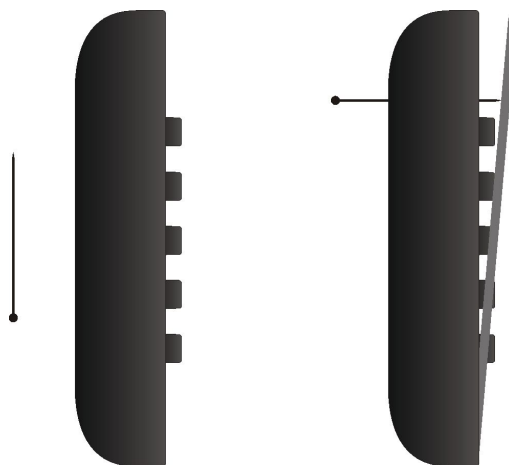

NB

Care must be taken to keep the aerial in the grooves. If the aerial is not seated correctly or trapped under the RCM/RNC keypad the front plate will not be able to be secured correctly.

Removal

The base of the RLC case has three small feet, one of which has a small hole in the centre. To remove the front plate push a small pin or straightened paper clip through the hole to break the grip of the retaining magnets.

This allows the keypad within to be accessed for battery changing and other servicing.