

RAK4-T Instruction Manual



For programming information: [Wireless RAK Programming guide](#) or [Wired system Programming Guide](#)

For general system information: [Wireless RAK Application Sheet](#) or [Wired RAK Application Sheet](#)

Overview:


A four channel dimming RAK, designed to be wall mounted in an electrical cupboard. The dimmer has 4 separate dimming channels that can control a total of 2400W/2000VA of trailing edge dimmable lighting loads. In parallel with the 4th dimmer channel is a separate switched relay channel for LEDs or Fans or other non-dimmable loads.

The RAK4-T is used for mains dimmable LEDs, tungsten and all other trailing edge dimmable loads.

RAK4s, combined with a Link device (RxLINK or RAK-LINK) can either be used as a single 4 channel unit or formed into a "stack". RAK4s can be also be used in combined stacks with RAK8-MB units on the same Link device.


Before commencing installation of a Rako product first read this instruction manual carefully. Rako Controls Ltd. accepts no responsibility for any damage or injury caused by incorrect installation of a Rako product. Installation should only be carried out by a qualified electrician. Always install RAK units in a well-ventilated room, with a minimum clearance of 50mm at the sides in the correct orientation i.e. vents top and bottom. Each RAK unit must be earthed.

Wireless system (RxLINK):

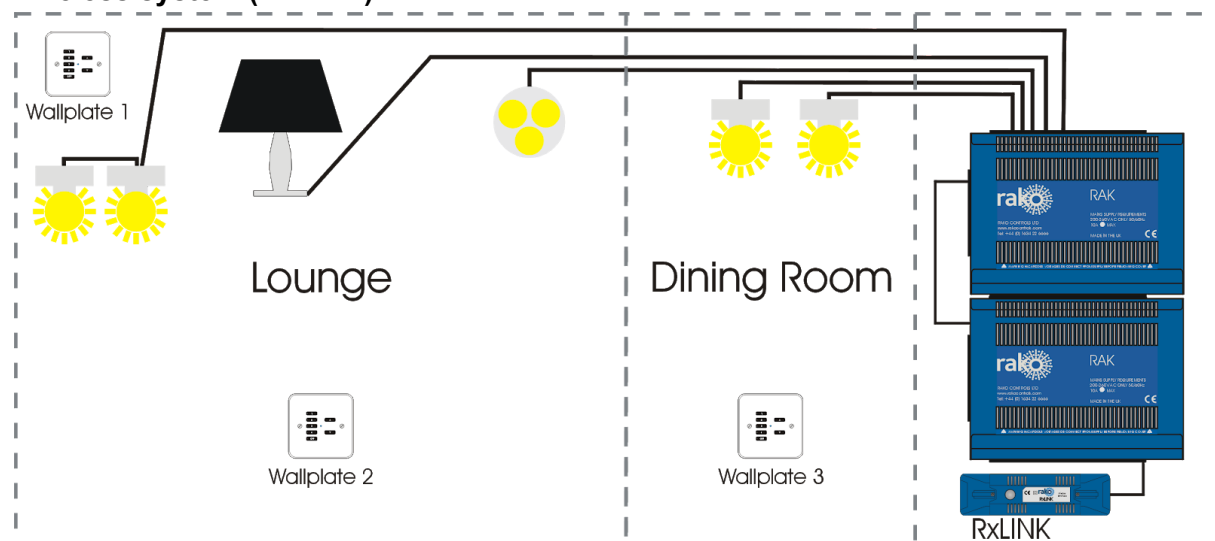


The RxLINK is used to integrate the RAK(s) into the wireless system and can support a total of 16 circuits. For example two RAK8s or one RAK8 and two RAK4s.

Wired system (RAK-LINK):

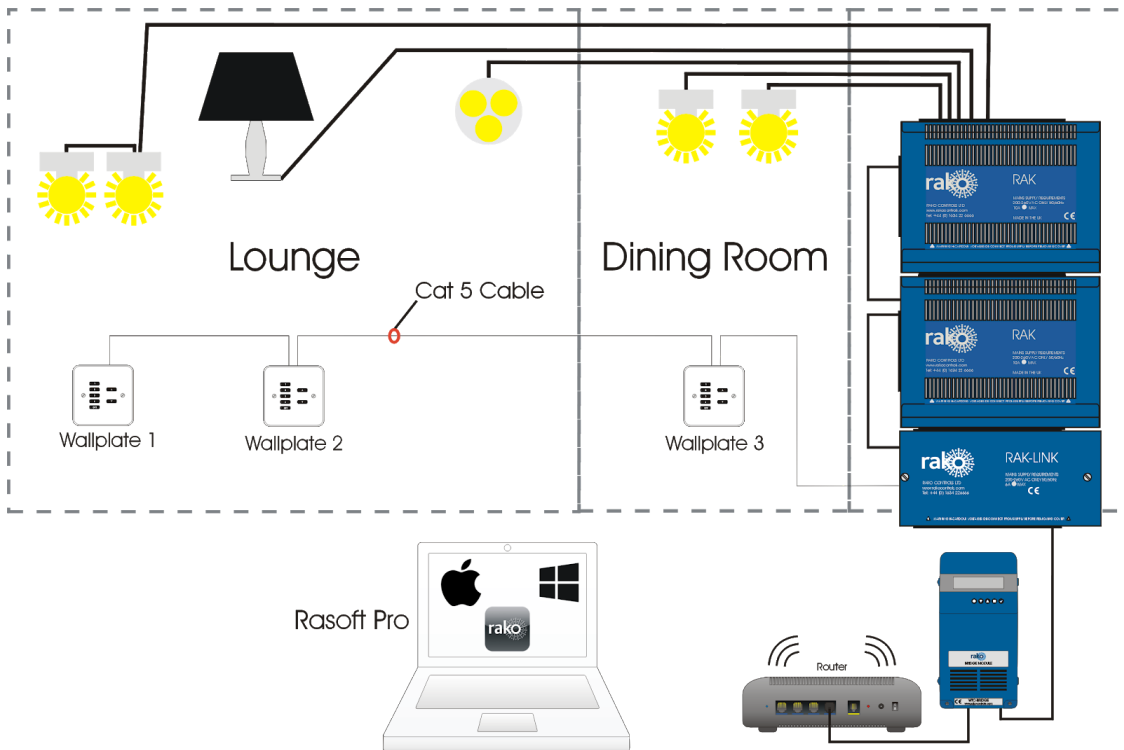




The RAK-LINK is used to integrate the RAK(s) into the Rako Wired Network and can support a total of 32 circuits. For example 4 RAK8s or 3 RAK8s and 2 RAK4s.

The circuit board:

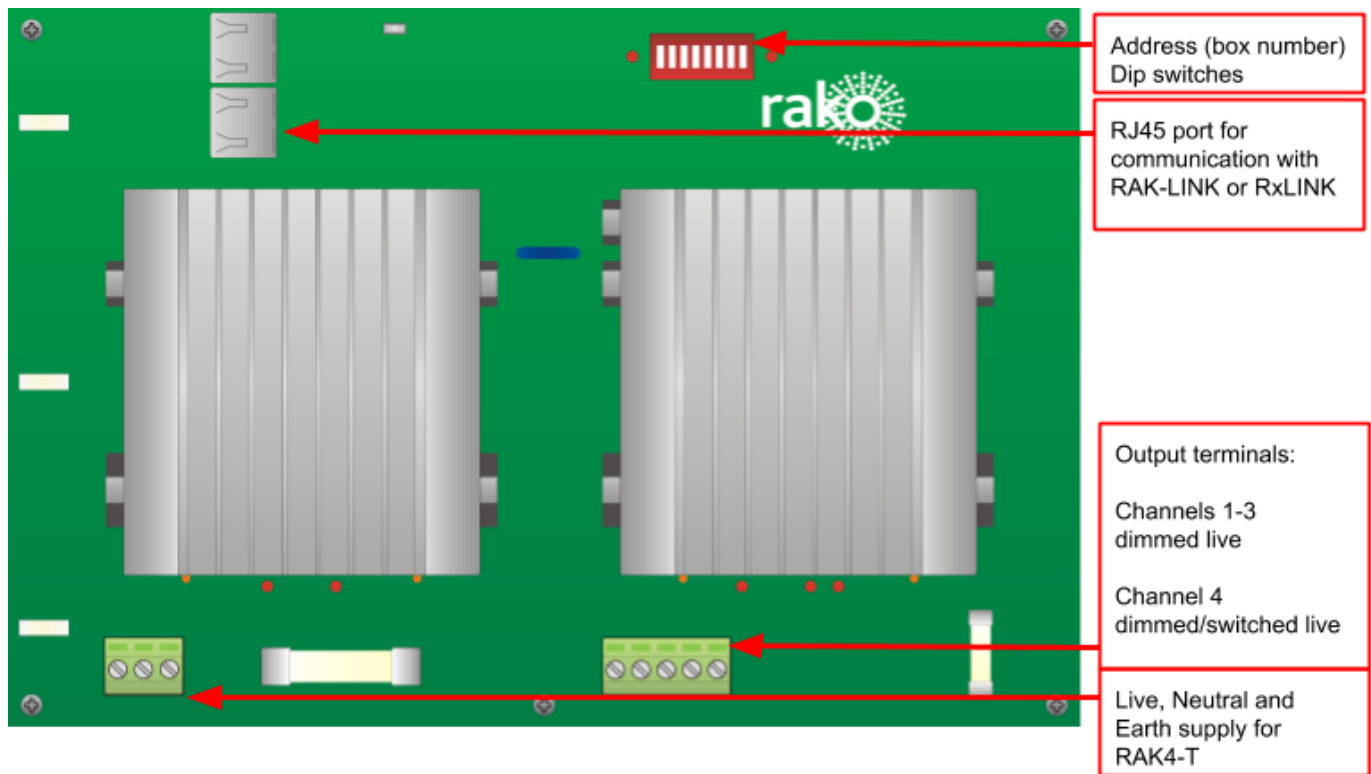

Installation:

POWER SHOULD BE ISOLATED THROUGHOUT THE INSTALLATION PROCESS
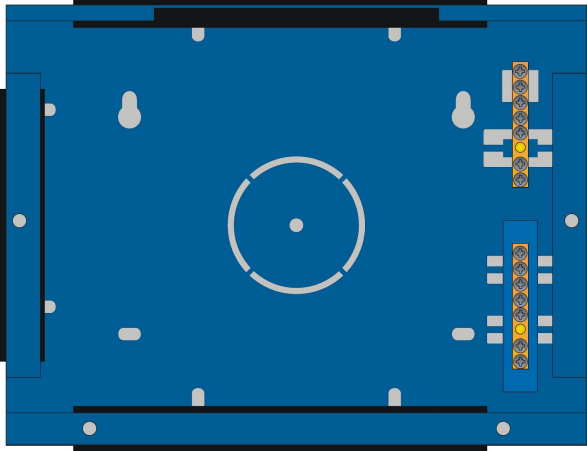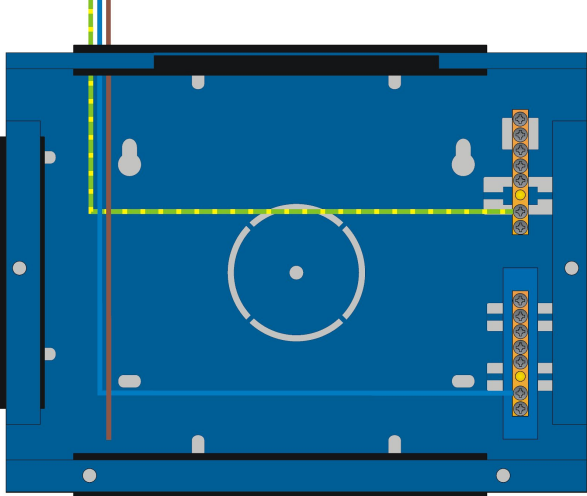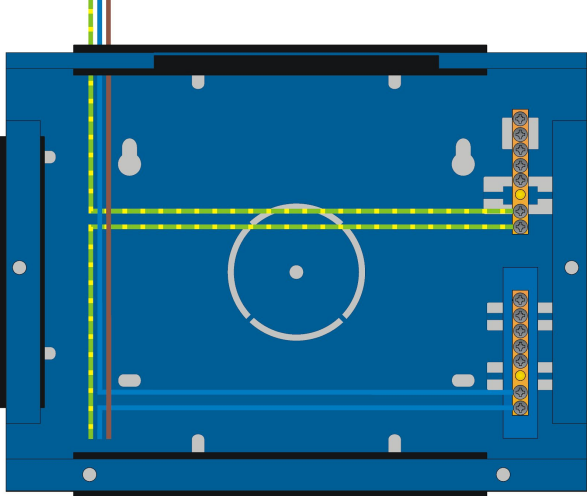
<p>Step 1</p>		<p>Secure metal box housing to wall or secure mounting position.</p> <p>The RAK system relies on being vertically mounted to allow the ventilation system to work properly.</p>
<p>Step 2</p>		<p>Bring a separate 10A protected supply to each RAK case.</p> <p>Connect the Neutral and Earth to the buzz bars as shown.</p> <p>Bring the Live to the front of the metalwork ready for connection to the circuit board.</p>
<p>Step 3</p>		<p>Bring a single Neutral and Earth from the buzz bars to the front of the metalwork.</p> <p>Prepare screws on either side of metalwork ready to hold the circuit board. They should be present and screwed loosely in to the case.</p>

