


WLED150CV1 User Manual



[What is the WLED150CV1?](#)

Rako WLED150CV1 modules are single channel dimmer units designed for use with constant voltage LED devices (usually flexible single colour tape lighting). They are designed to accept a 12V or 24V DC supply from a power supply (normally the power supply that would power the LED device if it were not to be dimmed) and give a PWM (Pulse Width Modulation) output for smooth flicker free dimming. They communicate over the Rako Wired Network connected via a WP-CONC connection and can be used in both a daisy-chain and star wiring configuration.

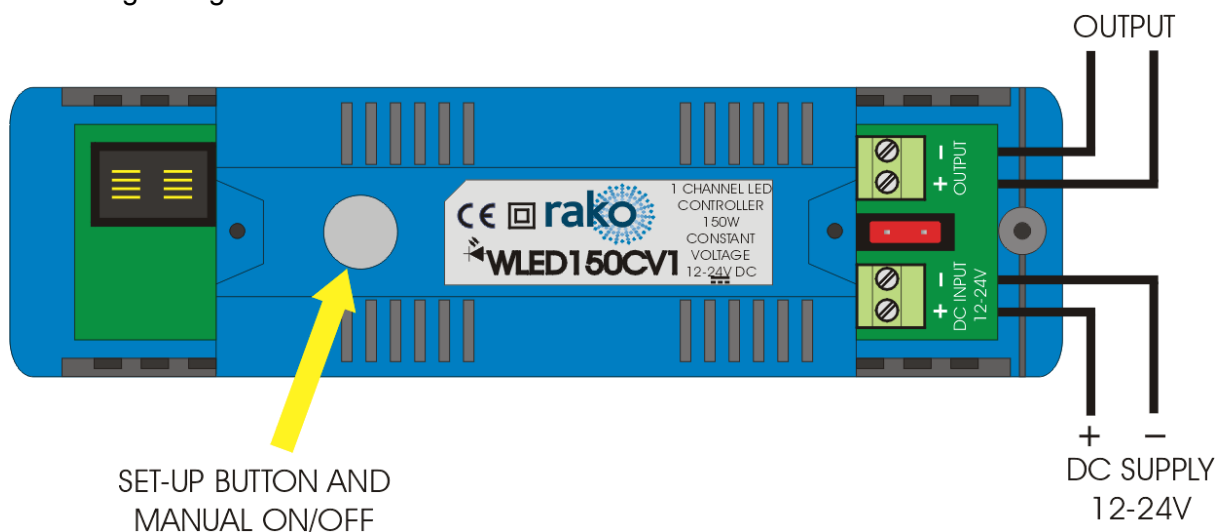

[Installing the WLED150CV1](#)

Mounting

Rako modules should be mounted in areas that are adequately ventilated, dry and outside of any enclosed metal casings that may interfere with the wireless signal. Wherever possible the mounting bracket should be used. Whilst Rako modules are designed to be completely maintenance free the units should be mounted in an accessible location should there be a fault or re-addressing of the unit be necessary.

Connections

Connect the WLED150CV1 module according to the wiring diagram above. Please note the unit is designed to be fed from a 12V or 24V DC power supply. The power supply should be of an adequate rating for the connected load. For example, if dimming 4m of LED tape light

with a rating of 12V and 14.4W/m the power supply needs to be rated to give at least 57.6W. If more than 5m of tape lighting is to be connected it is generally recommended to parallel the connections at the WLED150CV1 module rather than connecting the start of the second strip to the end of the first. This avoids excessive voltage drop issues.

Ensure the cable clamp bar securely clamps the cables and that the terminal cover is fitted before switching the supply on.

Initial Checks

When power is initially connected to the module the unit should switch the load ON. The load can then be manually switched using the clear button on top of the module.

The factory set address for both modules and transmitters is House 1 Room 4.

Should the module not respond as above then further investigation should be made before proceeding further

Maximum loadings

150W @ 12V

300W @ 24V

[Adding the WLED150CV1 as a device](#)

For the WLED150CV1 to operate correctly with a RAKO system some initial setup must be performed. This is done using a PC running RASOFT Pro (WLED150CV1 is not supported by RASOFT classic) and communicating with a RAKO Bridge connected to the same wired system as the WLED150CV1.

Open the Project File for the installed Rako system and make sure that Rasoft is connected to a communication device.




NB

The communication window at the bottom right should indicate whether a Bridge is connected or not. For instructions on how to connect to a Bridge see Rasoft Pro programming guides.

- Select "File" - "New device" to bring up the "New device Wizard" and choose "WLED150CV1" from the list.
- Choose a suitable device name if desired or leave blank with the "Automatic Name" check box ticked.
- Associate the WLED150CV1 to the desired room and channel from the drop down menu. "Associate to new channel" will address the device to the next available channel in the room.

- Once this screen appears press and hold the blue button on the WLED150CV1. After a few seconds it will enter Setup Mode and the status LED will start to blink. Release the button and “Waiting for device to enter setup” should change to “Device Found”.
- Click the “Finish” button to complete setup

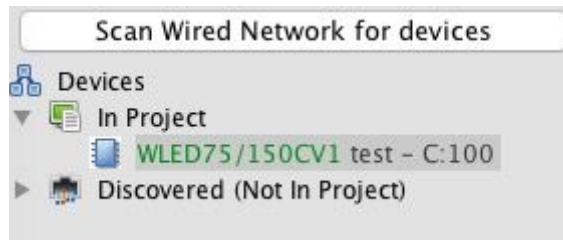

NB

Once complete the WLED150CV1 will appear as above in the device editor. Selecting it will open the device editor where additional setting can be edited.

Rako thanks you for having purchased a Rako product and hopes that you are pleased with your system. Should for any reason you need to contact us please contact us via our website www.rakocontrols.com or by phoning our customer help line on 01634 226666.

