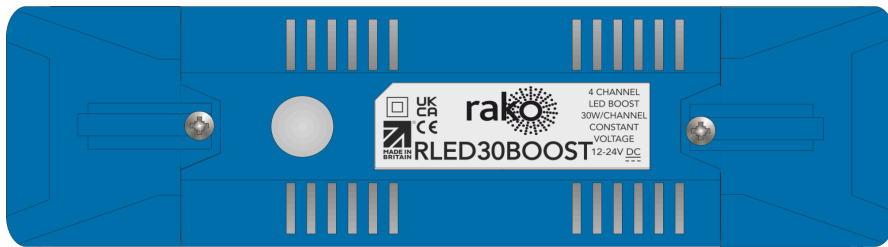




Instruction Manual

RLED30BOOST

RLED30CV4+ / WLED30CV4 Booster Module



2024

Version 2.0.0



For an overview of the wireless systems: [Wireless Module Application Sheet](#) / [Wireless RAK Application Sheet](#)

For programming a wireless system: [Wireless Module Programming Guide](#)

Contents

[1 What is the RLED30BOOST?](#)

[2 Loadings](#)

[3 Installation of the RLED30BOOST](#)

[4 Initial Checks](#)

[Appendix 1 - Wiring options](#)

1 What is the RLED30BOOST?

The RLED30BOOST is a voltage booster for the RLED30CV4+ and WLED30CV4, the device is used when the total load is approaching or exceeding the maximum limit.

NB

The RLED30BOOST is not a programmable dimmer, its control relies on the PWM signal from the RLED30CV4 or WLED30CV4.

2 Loadings

Input Voltage	Wattage
12VDC	30W per Channel
24VDC	60W per Channel

3 Installation of the RLED30BOOST

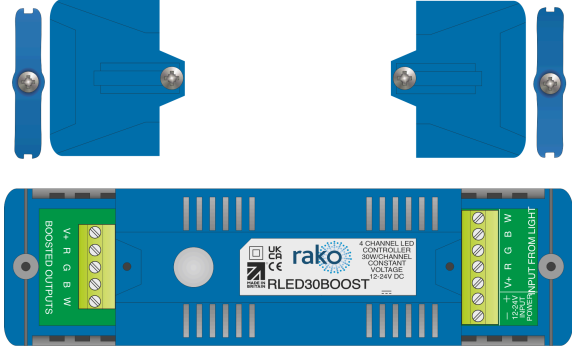
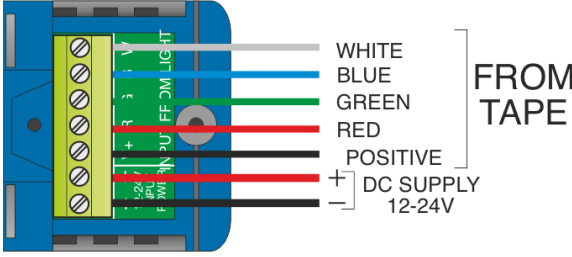
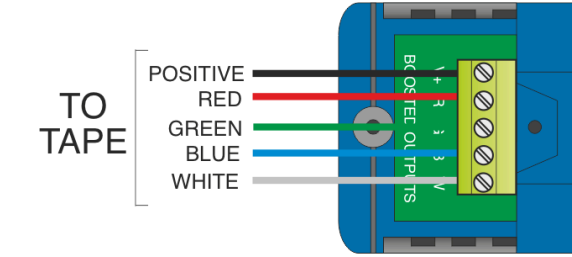
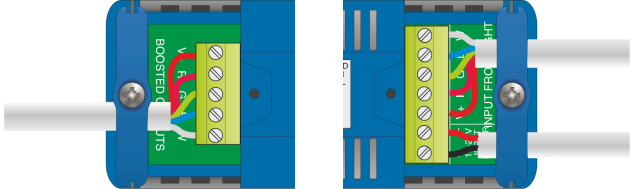
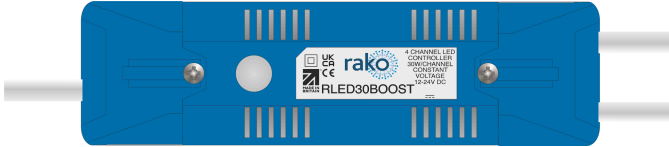
⚠ WARNING

Installation should only be carried out by a competent electrician.
DO NOT CONNECT DIRECTLY TO THE MAINS SUPPLY.

- RLED30BOOST modules should be mounted in areas that are adequately ventilated and dry.
- Modules should be mounted vertically, with the terminals at the bottom, or horizontally where possible.



- While the modules are designed to be maintenance-free, they should be mounted in an accessible location should investigation of the units be necessary.
- Ensure that the cable clamps are fitted tightly to secure the cables.
- The unit input voltage is 12V or 24V DC, and the power supply must be adequately rated for the connected load.

STEP 1		Remove the covers and cable clamps.
STEP 2		Insert the input from the existing load, as well as the DC supply.
STEP 3		Insert the output conductors, the output side will be powered by the RLED30BOOST.
STEP 4		Replace the cable clamps.
STEP 5		Replace the covers.

4 Initial Checks

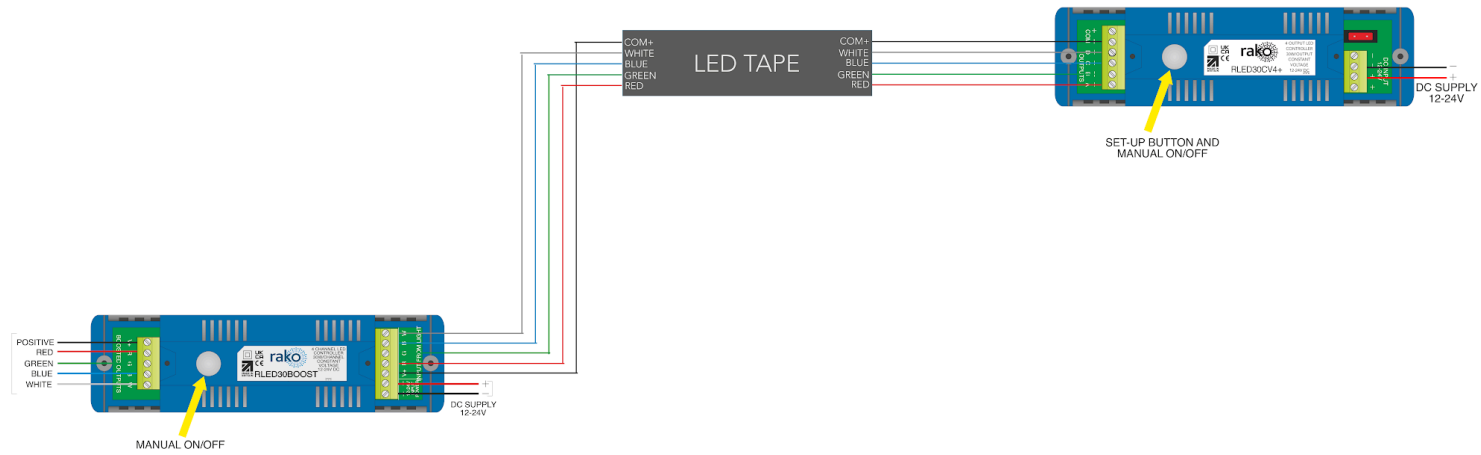
- When power is initially connected to the module, the load should copy the output setting of the connected RLED30CV4+ or WLED30CV4, for example: if the output on the RLED30CV4+ is set to red, the output of the RLED30BOOST will show red.
- If the RLED30CV4+ or WLED30CV4 is off or not connected, the clear button can be used as a manual on/off to test the output, the output will only illuminate whilst the button is held down and all outputs will go to full brightness.
- The RLED30BOOST does not have a Wireless receiver, the on board LED will not flash when a Wireless command is sent by a transmitter.

Thank you for choosing Rako Controls; we hope that you are pleased with your system. Should you require further assistance, please contact us via our website, www.rakocontrols.com, or by calling our customer support helpline on 01634 226666.

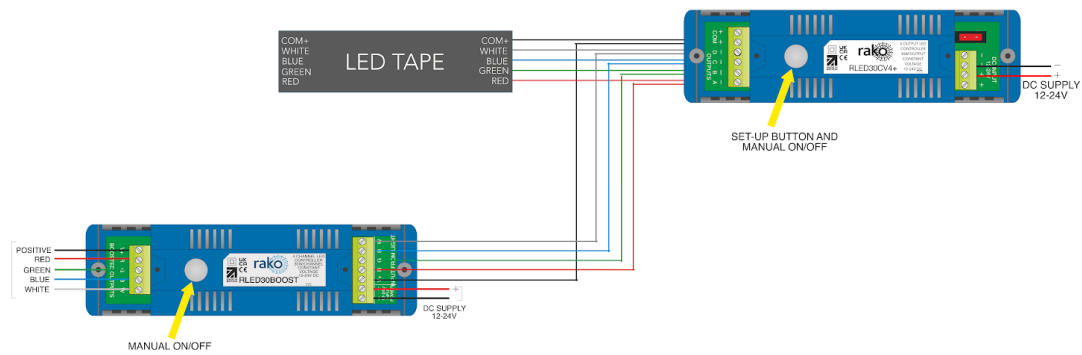


Appendix 1 - Wiring options

Wiring Option 1



Wiring Option 2



RLED30BOOST

Manual Version 2.0.0